


# EN YAMAHA V1

## Overview

To install Ototrak module you will need drill with a drill bit 3.2mm, phillips screwdriver, 10mm wrench and some silicone grease (not silicone spray) for watertight seal on connectors. Package contains Ototrak module, mounting bracket, screws and Yamaha EX cables.



OTOTRAK MODULE WITH MOUNTING BRACKET  
PART NO. OTY02

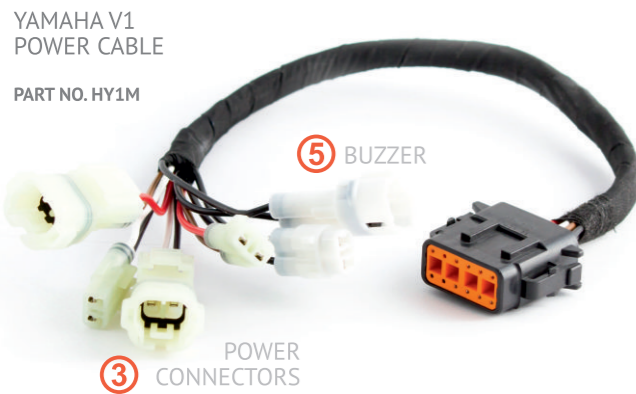


YAMAHA V1 POWER CABLE  
PART NO. HY1M



YAMAHA V1 THROTTLE CABLE  
PART NO. HYTH1

## Ototrak installment position

Lift up the hood (1) by releasing hood latch. Underneath is a bow storage compartment. Remove storage compartment's side plastic cover (2) and under the steering (handlebar) you will find all the necessary connectors for power (3), throttle (4) and buzzer (5). Ototrak module (6) is installed inside, just under the steering, same as the connectors.

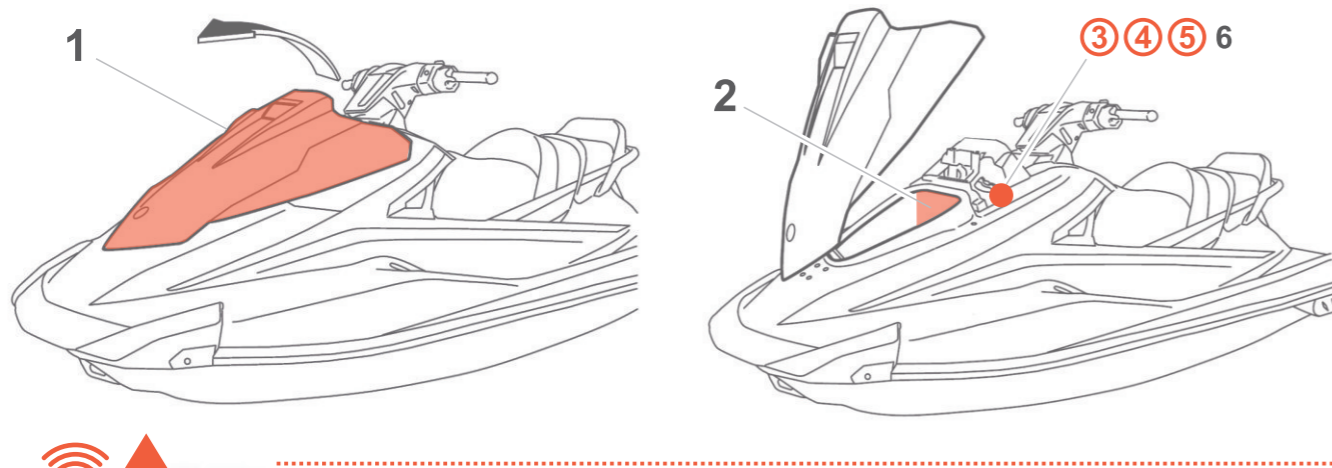

**NOTE:** For GPS to work correctly, module must be installed with antenna side (indicated by the IMEI sticker) facing upwards (towards the sky).

## Connecting Ototrak

Once you have removed compartment's side cover (2) and installed Ototrak, disconnect Yamaha's power (3) and buzzer (5) cable connections. Disconnect throttle cable (4) from the throttle sensor (7) which is at the bottom of compartment and then connect Ototrak cables as shown below.

